


3379 Cam & Crankshaft Seal Puller

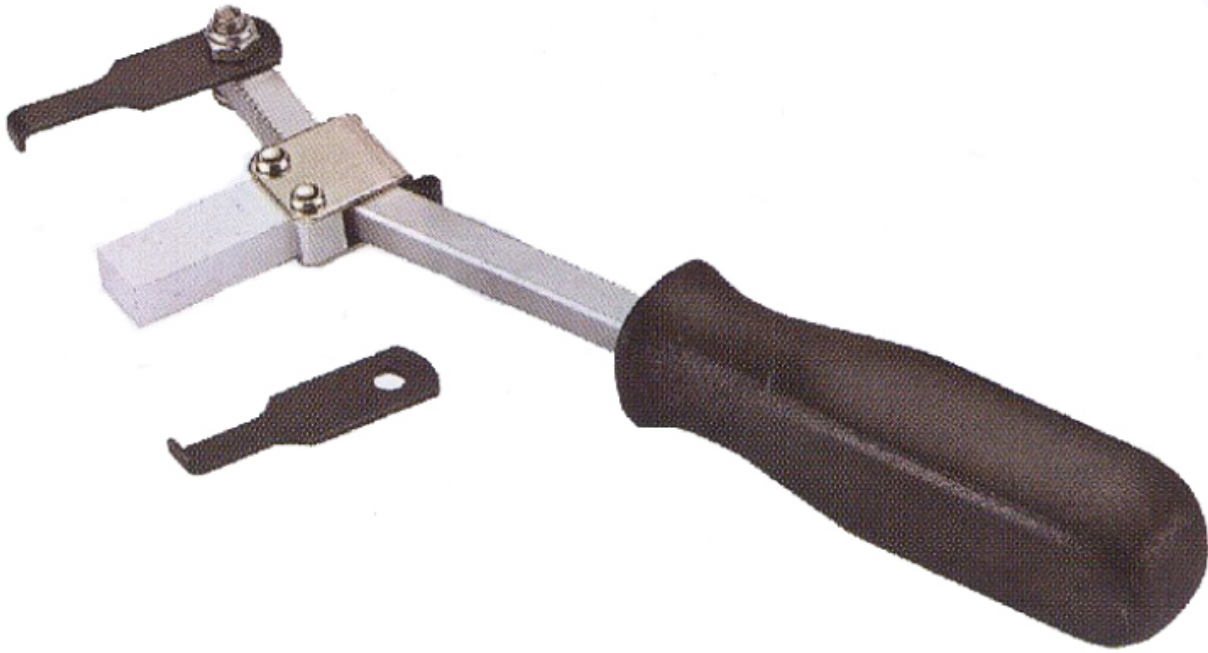

- Engage the adjustable hook behind the seal.
- Brace the push rod against the engine head then push the handle to remove the seal.
- Remove the seal easily and quickly without damage to the cam and crank shaft.
- Made In Taiwan