9028 Differential Side Bearing Puller



- Use to remove differential side carrier bearing
- Works on a wide variety of cars and light duty truck
- Include four step plate adapters to fit carrier bearings.
- Specification:
 - \circ Reach 1-5/8", Spread: 2-5/8" to 3-3/8".
 - \circ Forcing screw is 3/4" 16mm x 6-11/16"lg
 - ∘ Adapter sizes: 15/16" to 1-3/4" diameter
- Made In Taiwan