


4241 Taiwan Grease Gun

Instruction - how to use grease gun

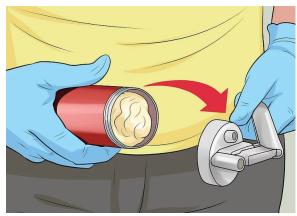

1. Unscrew gun head



2. Draw Back Handle



3. Lock the rod handle



4a. Insert the new grease cartridge into the barrel of the gun.(max 400g for grease catridge)



4b. Position the barrel of the gun over a tub of grease. draw back handle 5cm / 2", fill and repeat.



5. screw on gun head, press clamping lever, push rod handle into gun, open valve.

Note: Please use in accordance with instructions, failre to comply will damage product.