
9278 H5.5 \times 8.2mm \times 1/2" DR Pry Bit Socket (38mm)

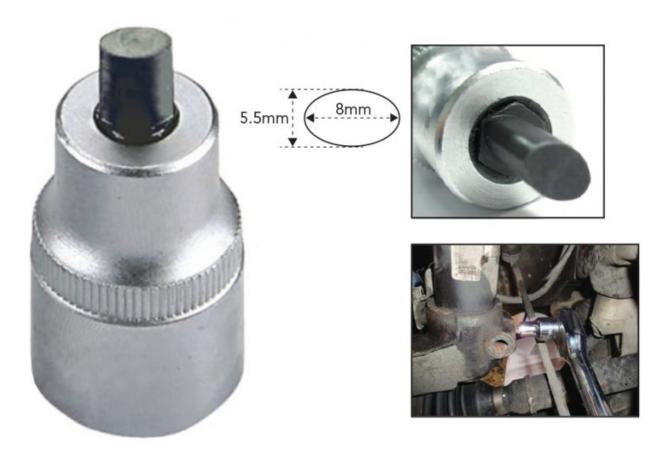

- Is designed to widen clamping bores.
- This procedure is essential for the professional removal of tightfitting/stuck suspension strut-/ damper units from steering knuckle clamping bores.
- As a result, shock absorber units can easily be removed and installed. Hammer and chisel are no longer required.
- Size: 5.5mm
- Made In Taiwan