


9279 H5 x 7mm x 1/2" Pry Bit Socket (38mm)

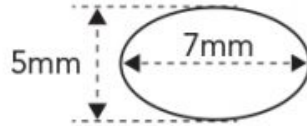

- Is designed to widen clamping bores.
- This procedure is essential for the professional removal of tight-fitting/stuck suspension strut-/damper units from steering knuckle clamping bores.
- As a result, shock absorber units can easily be removed and installed. Hammer and chisel are no longer required.
- Size: 5mm
- Made In Taiwan